



FILTER IS LOCATED BEHIND THE GLOVE BOX

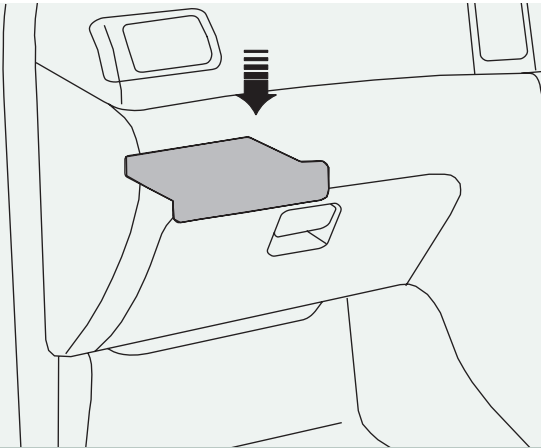


STEP 1

The cabin air filter is located behind the glove compartment.

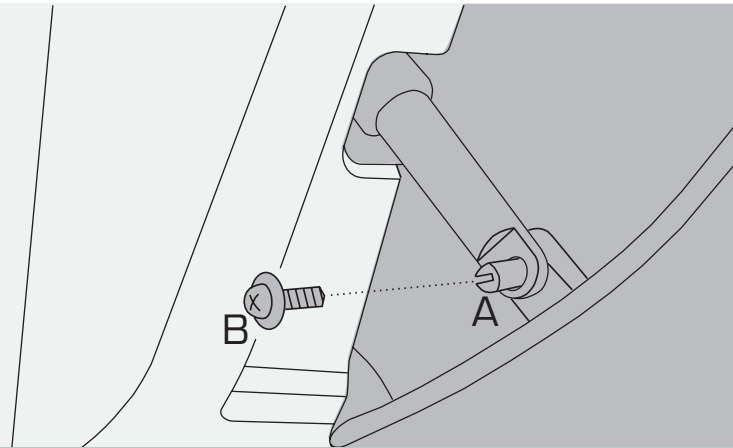


STEP 2

Open the glove compartment & remove the support arm by sliding the arm off the pin [A] or removing the Phillips head screw [B] (if either are fitted).

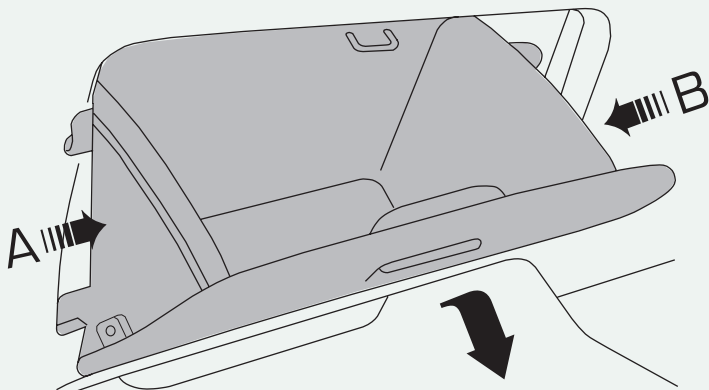


STEP 3

Push each side of glove compartment [A & B] to release catches then remove glove compartment.

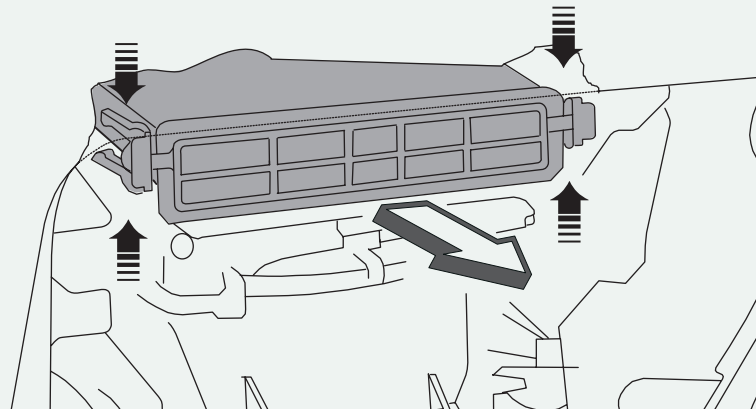


STEP 4

To remove filter assembly, hold tray on both sides as shown and pull out.

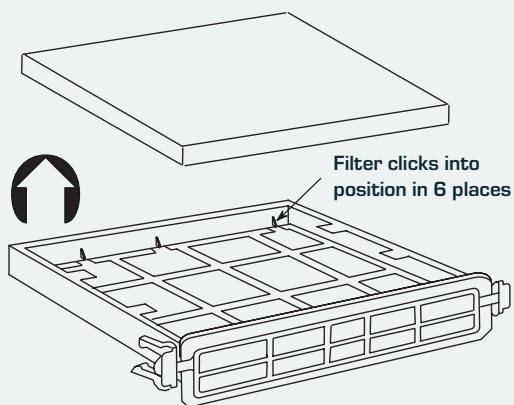

STEP 5

Remove used filter from tray, fit new filter to tray, making sure that flat side is facing down.

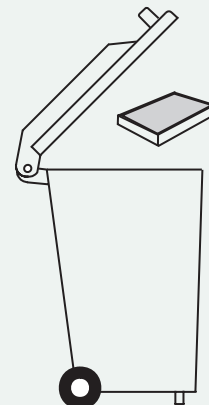


STEP 6


Push new filter assembly and tray into position then refit all previously removed components. Dispose of used filter correctly.

TOYOTA YARIS


FILTER IS LOCATED BEHIND THE GLOVE BOX

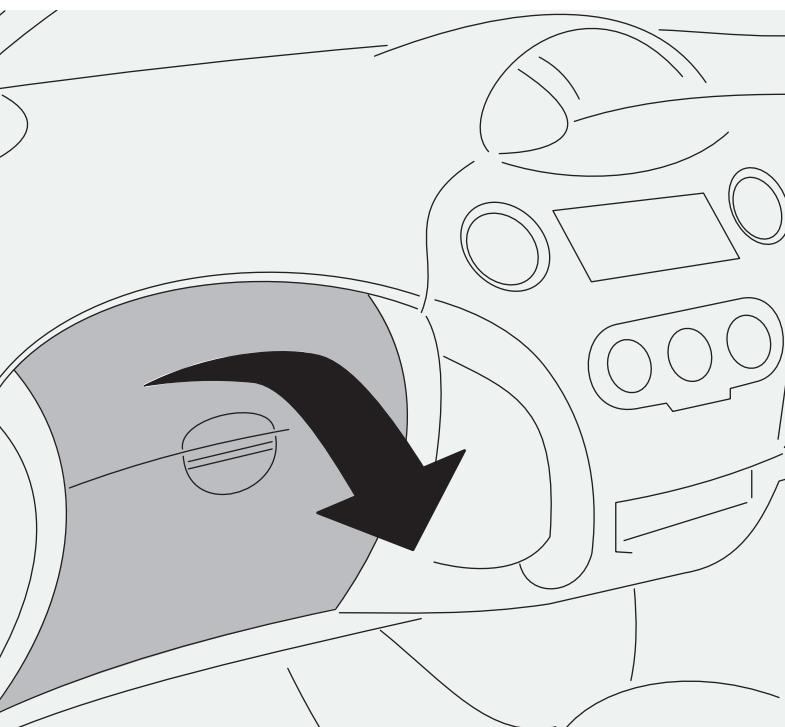


STEP 1
Open glove box, apply pressure to both sides of glove box to release catches.

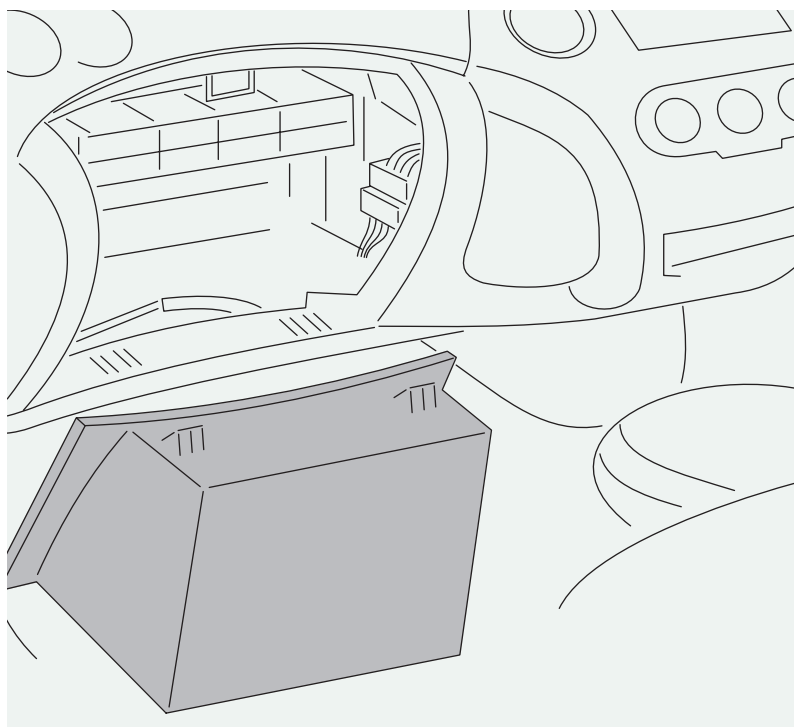

STEP 2
Open glove box as far as possible and remove.

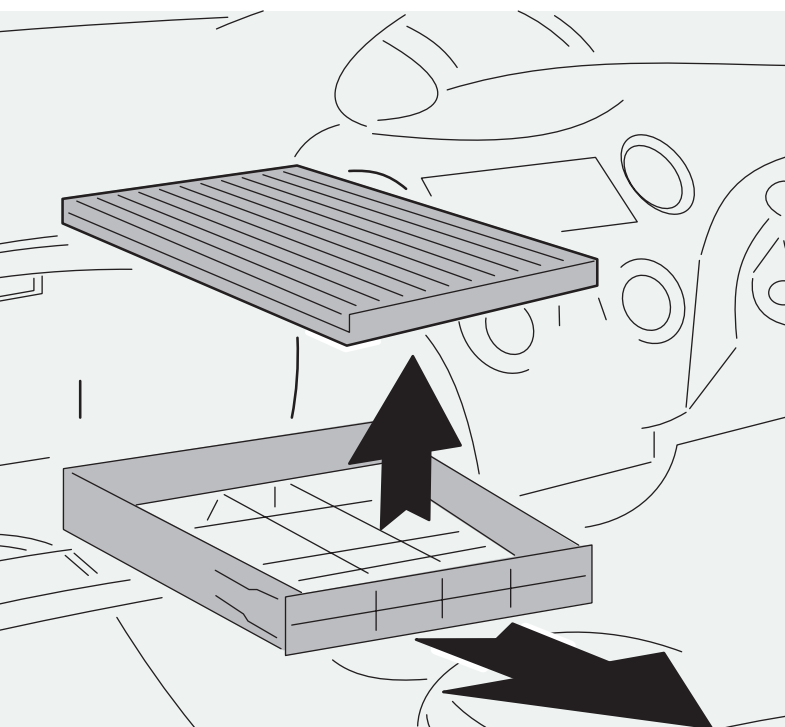


STEP 3
Remove used filter from tray. Fit new Ryco filter, refit all previously removed components.

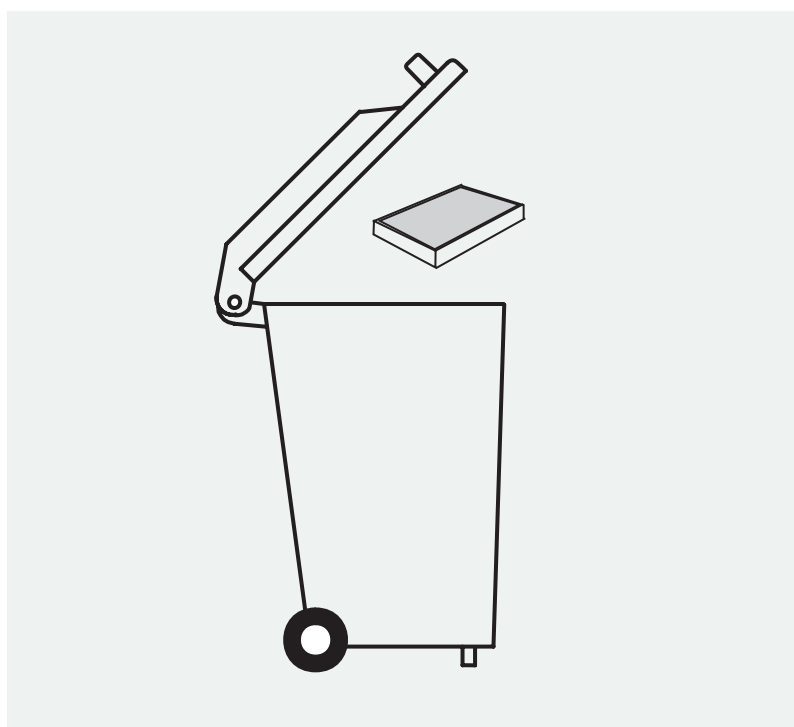

STEP 4
Dispose of used filter correctly.


TOYOTA COROLLA

FILTER IS LOCATED BEHIND THE GLOVE BOX

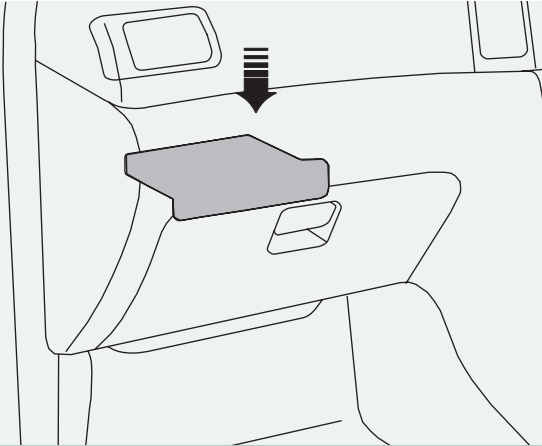


STEP 1

The cabin air filter is located behind the glove compartment.

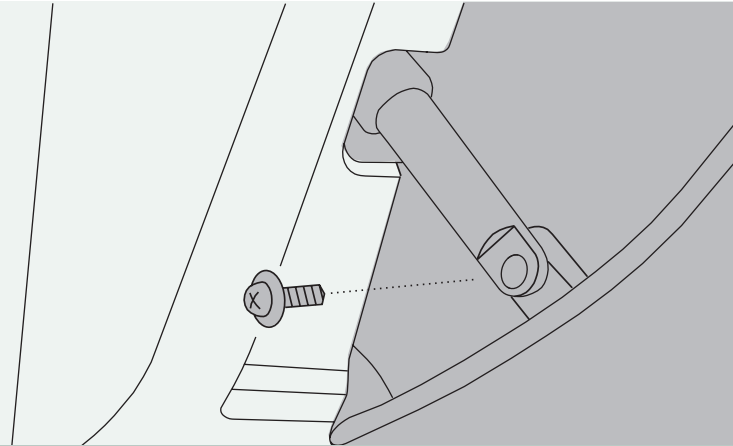


STEP 2

Open the glove compartment and remove the screw on the support arm with a Phillips head screwdriver.

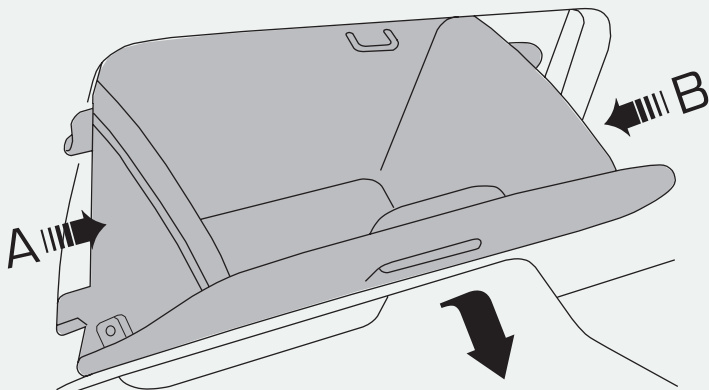


STEP 3

Push each side of glove compartment [A & B] to release catches then remove glove compartment.

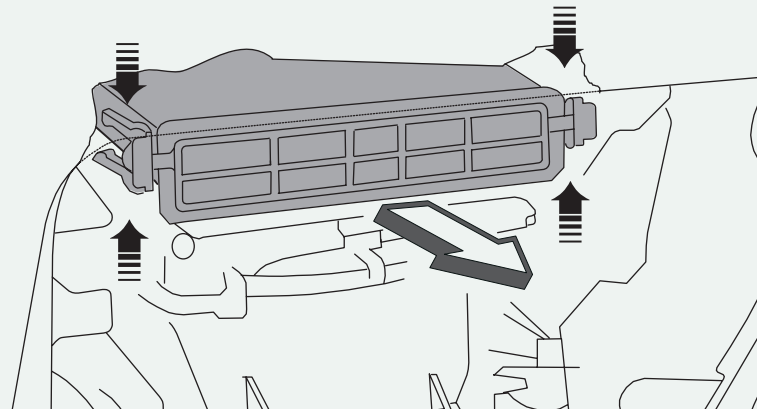


STEP 4

To remove filter assembly, hold tray on both sides as shown and pull out.

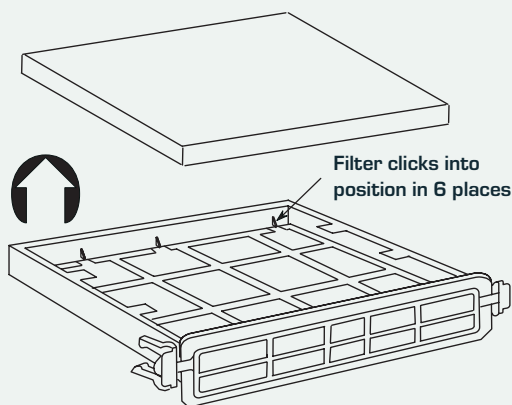

STEP 5

Remove used filter from tray, fit new filter to tray, making sure that flat side is facing down.

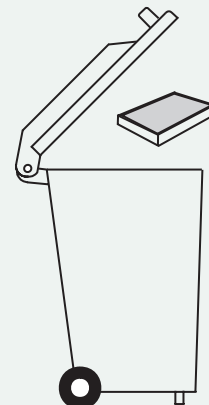

STEP 6

Push new filter assembly and tray into position then refit all previously removed components. Dispose of used filter correctly.