

FILTER IS LOCATED BEHIND THE GLOVE BOX

WORK PROCEDURE

- 1 The cabin air filter housing is located behind the glove box unit on the passenger side. Open the glove box and disengage the retaining lugs from each side of the unit by compressing the top sides towards the inside. Drop the unit gently pushing until supporting strut is visible. Disengage the strut by unclipping it from the lug and drop down the glove box compartment. Refer to FIG. 1.
- 2 The white plastic area visible in FIG. 2 is the cabin air filter housing. Remove the screws securing the lid (refer to FIG. 3) and pull the lid out. Note that the lid is part of the filter so be gentle when pulling out to avoid accumulated debris from being spread around.

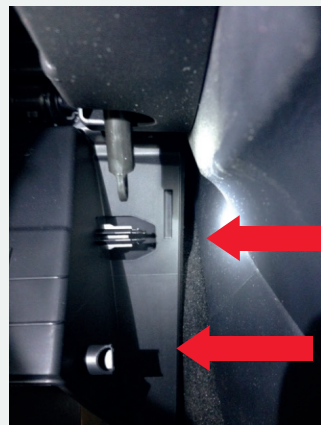


FIGURE 1



FIGURE 2



FIGURE 3

FILTER IS LOCATED BEHIND THE GLOVE BOX

WORK PROCEDURE

- 3 Once the filter has been removed proceed to clean the housing of any loose dirt and slide in the new cabin air filter element (refer to FIG. 5). Screw the lid back on and refit all remaining components in reverse order.

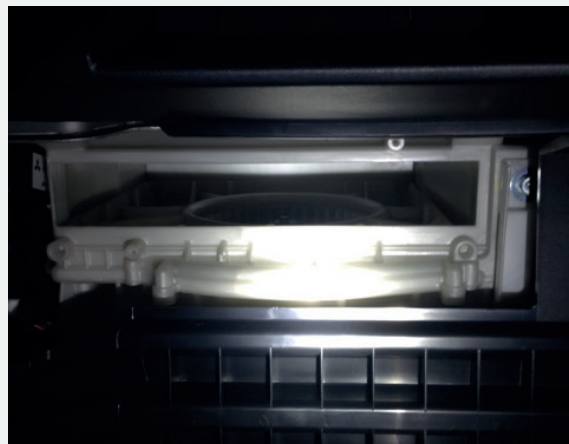


FIGURE 4



FIGURE 5