



1

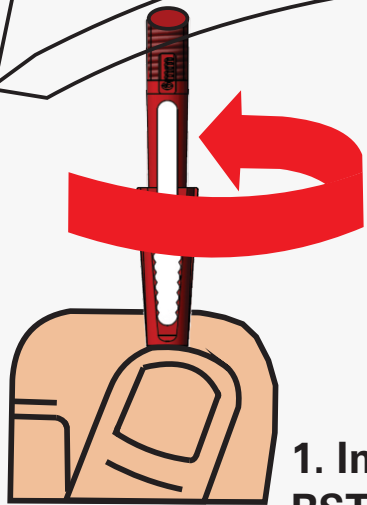


1. Install one (1) of the four (4) RST301 pins in each corner hole of the transmission case.

2

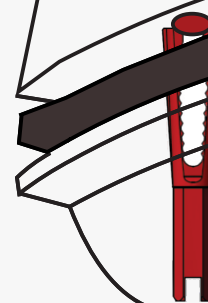


2. Align and slide the gasket over the pins and do the same with the transmission pan.

3

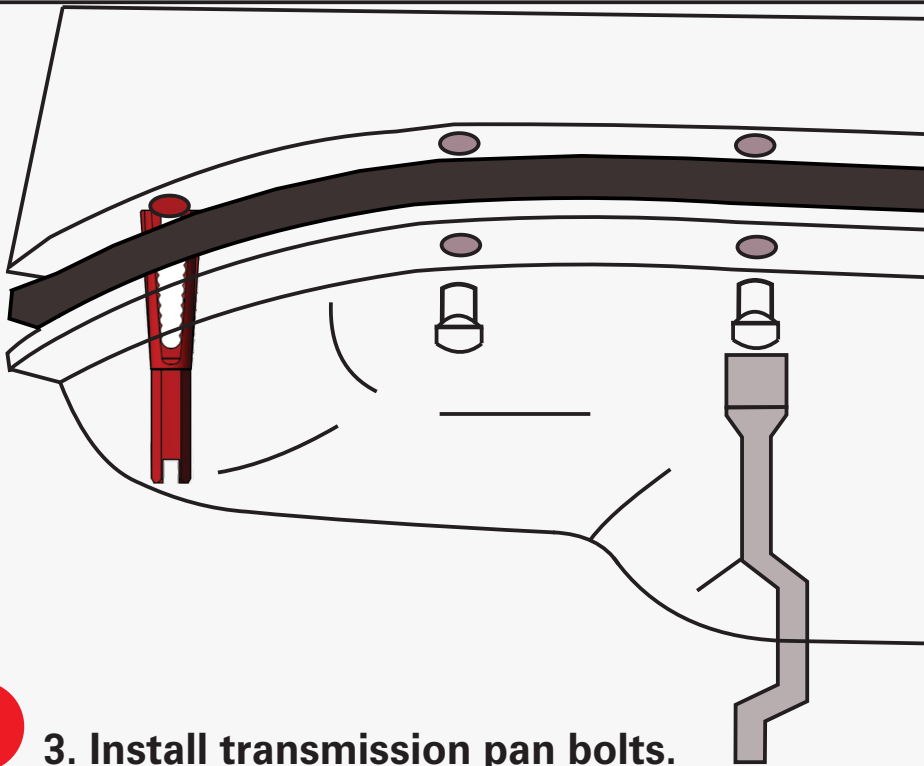

3. Install transmission pan bolts.

4

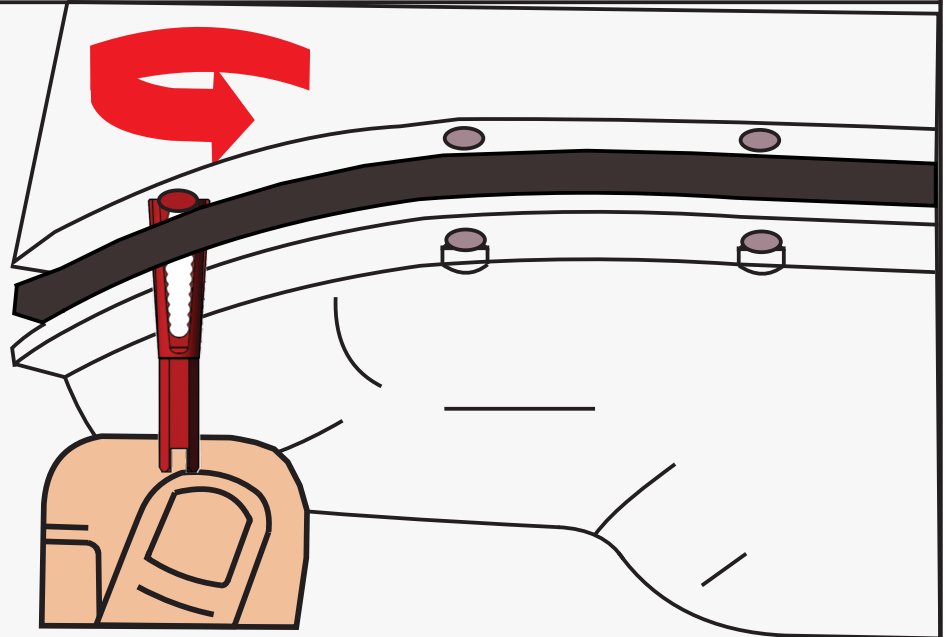

4. Remove the RST301 pins. Install remaining pan bolts & torque to manufacturers' specs.